

INTRODUCTION

Thank you for choosing an HK Instruments DPT-Dual-MOD series differential pressure transmitter. DPT-Dual-MOD combines two differential pressure transmitters into one device. It offers a possibility to measure pressure from two different points. It has a Modbus interface and an Input terminal.

The Input terminal enables reading of multiple other signals such as temperature or control relays over Modbus. The Input terminal has two input channels designed to accept 0–10 V, NTC10k, Pt1000, Ni1000/(-LG), and BIN IN (potential free contact) signals. For example, DPT-Dual-MOD can read values from two differential pressure measurement points and two temperature measurement points.

APPLICATIONS

DPT-Dual-MOD series devices are commonly used in HVAC/R systems for:

- fan, blower and filter monitoring
- pressure and flow monitoring
- valve and damper control
- pressure monitoring in cleanrooms

DPT-Dual-MOD-AHU can also be used for:

- air flow monitoring across centrifugal fans and blowers
- in-duct air flow monitoring
- VAV applications

SPECIFICATIONS

Performance

Accuracy (from applied pressure):

Model 2500:

Pressure < 125 Pa = 1 % + ±2 Pa

Pressure > 125 Pa = 1 % + ±1 Pa

Model 7000:

Pressure < 125 Pa = 1.5 % + ±2 Pa

Pressure > 125 Pa = 1.5 % + ±1 Pa

(Including: general accuracy, linearity, hysteresis, long term stability and repetition error)

Input accuracy:

<0,5%

Response time:

1...20 s selectable via menu

Overpressure:

Proof pressure: 25 kPa

Burst pressure: 30 kPa

Communication

Protocol: MODBUS over Serial Line

Transmission Mode: RTU

Interface: RS485

Byte format (11 bits) in RTU mode:

Coding System: 8-bit binary

Bits per Byte:

1 start bit

8 data bits, least significant bit sent first

1 bit for parity

1 stop bit

Baud rate: selectable in configuration

Modbus address: 1–247 addresses selectable in configuration menu

Zero point calibration options:

- Manual pushbutton autozero
- Via Modbus write coil

Technical Specifications

Media compatibility:

Dry air or non-aggressive gases

Measuring units on display (Selectable via menu):

Pressure: Pa, kPa, mbar, inchWC, mmWC, psi

Flow (AHU model): m³/s, m³/hr, cfm, l/s, m/s, ft/min

Measuring element:

MEMS, no flow-through

Environment:

Operating temperature: -20...+50 °C

Temperature compensated range 0...+50°C

Storage temperature: -40...+70 °C

Humidity: 0 to 95 % rH

Physical

Dimensions:

Case: 102.0 x 71.5 x 36.0 mm

Weight:

150 g, with accessories 290 g

Mounting:

2 each 4.3 mm screw holes, one slotted

Materials:

Case: ABS

Lid: PC

Pressure inlets: Brass

Duct connectors: ABS

Tubing: PVC

Protection standard:

IP54

Display:

2-line display (12 characters/line)

Line 1: active measurement, inlet A

Line 2: active measurement, inlet B

If inputs are selected, the lines show also input information (for example temperature)



WARNING

- READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO INSTALL, OPERATE OR SERVICE THIS DEVICE.
- Failure to observe safety information and comply with instructions can result in PERSONAL INJURY, DEATH AND/OR PROPERTY DAMAGE.
- To avoid electrical shock or damage to equipment, disconnect power before installing or servicing and use only wiring with insulation rated for full device operating voltage.
- To avoid potential fire and/or explosion do not use in potentially flammable or explosive atmospheres.
- Retain these instructions for future reference.
- This product, when installed, will be part of an engineered system whose specifications and performance characteristics are not designed or controlled by HK Instruments. Review applications and national and local codes to assure that the installation will be functional and safe. Use only experienced and knowledgeable technicians to install this device.

Electrical Connections:

4+4 spring load terminals, max 1.5 mm²

Cable Entry: M20

Pressure connections:

Male ∅ 5,0 mm and 6,3 mm

Electrical

Supply voltage:

24 VAC or VDC ± 10 %

Power consumption:

< 1.3 W

Output signal:

via Modbus

Input signals:

2 x input (0...10v, NTC10k, Pt1000, NI1000/(-LG), or BIN IN)

Conformance

Meets requirements for CE marking:

EMC directive 2014/30/EU


RoHS Directive 2011/65/EU

WEEE Directive 2012/19/EU


COMPANY WITH
MANAGEMENT SYSTEM
CERTIFIED BY DNV GL
= ISO 9001 = ISO 14001 =



SCHEMATICS

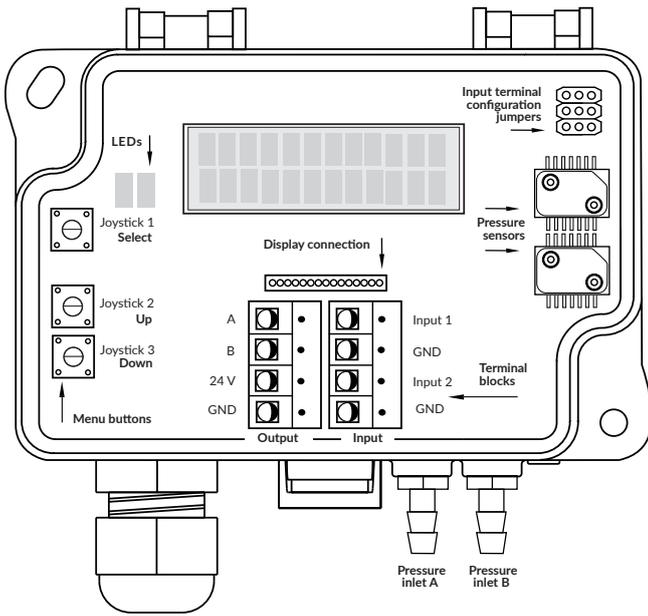

DIMENSIONAL DRAWINGS

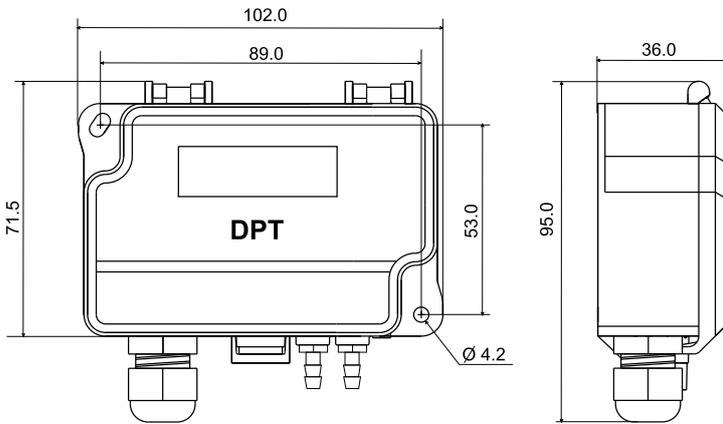

INSTALLATION

- 1) Mount the device in the desired location (see step 1).
- 2) Open the lid and route the cable through the strain relief and connect the wires to the terminal block(s) (see step 2).
- 3) The device is now ready for configuration.

⚠ WARNING! Apply power only after the device is properly wired.

STEP 1: MOUNTING THE DEVICE

- 1) Select the mounting location (duct, wall, panel).
- 2) Use the device as a template and mark the screw holes.
- 3) Mount with appropriate screws.

MOUNTING THE DEVICE CONTINUED

Figure 1a - Mounting orientation


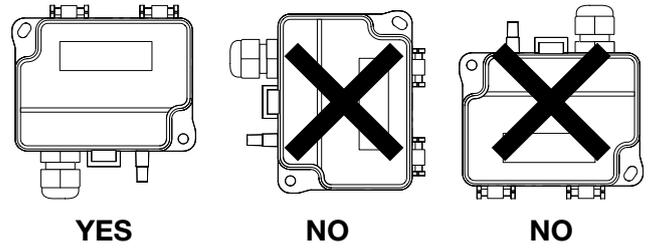


Figure 1b - Application connections

Pressure

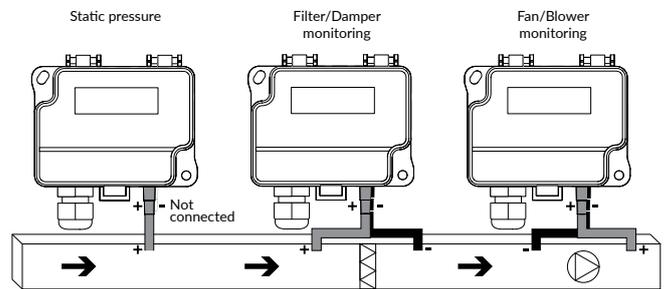

Flow

The pressure tubes are connected to a flow measurement probe (i.e. FloXact), or to the measurement ports specified by the fan manufacturer. Please see the FloXact installation guide or the fan manufacturer's technical specifications for more information.

STEP 2: WIRING DIAGRAMS

For CE compliance, a properly grounded shielding cable is required.

- 1) Unscrew the strain relief and route the cable(s).
- 2) Connect the wires as shown in figure 2a and 2b.
- 3) Tighten the strain relief.

Figure 2a - Wiring diagram


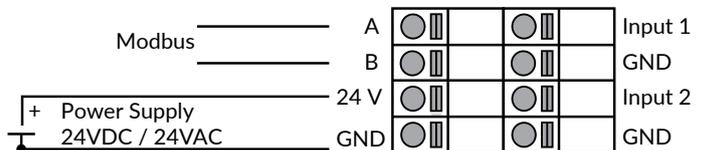


Figure 2b - Wiring diagram example for input signals

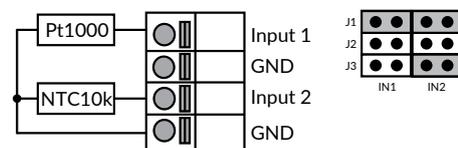

Input 1 Pt1000 temperature:
Function 04 - Read input register 3x0005
Input 2 NTC10k temperature:
Function 04 - Read input register 3x0008


STEP 3: CONFIGURATION

1) Activate the device Menu by pushing the the select button for 2 seconds.

Points 2-8 for AHU model only:

2) Select the functioning mode of the device:

- Select *Manufacturer* when connecting DPT-Dual-MOD-AHU to a fan with pressure measurement points
- Select *Common probe* when using DPT-Dual-MOD-AHU with a common measurement probe that follows the formula:
 $q = k \cdot \sqrt{\Delta P}$ (i.e. FloXact)

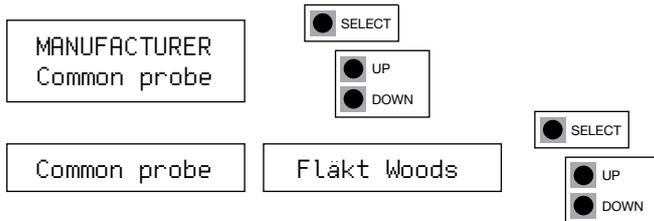

3) If *common probe* selected: select measurement units used in the formula (aka Formula unit) (i.e. l/s)




4) Select K-value

Each application has a specific K-value. Select the K-value from the manufacturer's specifications.

Available K-value range: 0.001...9999.000



5) Select pressure unit for display: Pa, kPa, mbar, inWC or mmWC

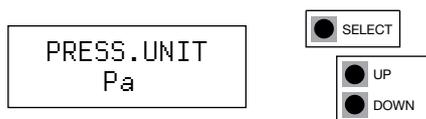

6) Select flow unit for display:


Flow volume: m³/s, m³/h, cfm, l/s

Velocity: m/s, f/min



7) Select the the type of sensor for input 1:


NTC10k, Ni1000-LG, Ni1000, Pt1000, VINPUT (voltage 0-10 V), none (sensor 1 will not be shown on display)

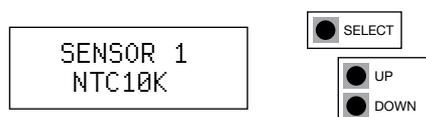

CONFIGURATION CONTINUED

7) Select the the type of sensor for input 2:

NTC10k, Ni1000-LG, Ni1000, Pt1000, VINPUT (voltage 0-10 V), none (sensor 2 will not be shown on display)

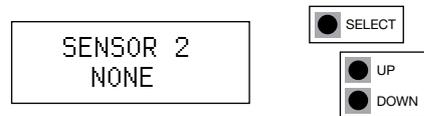

9) Select the address for Modbus: 1...247.




10) Select the baud rate: 9600/19200/38400.



11) Select the parity bit: None/Even/Odd.



12) Select the pressure unit for display: Pa/inchWC/mmWC/psi/mbar.
(Not for AHU model)

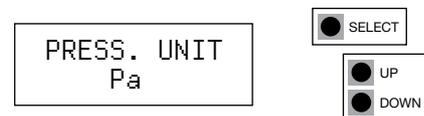

13) Select the response time: 1...20 s.



14) Push the select button to exit menu.



STEP 4: ZERO POINT ADJUSTMENT

NOTE! Always zero the device before use.

Supply voltage must be connected one hour before the zero point adjustment is carried out. Access via Modbus or by push button.

1) Loose both tubes from the pressure inlets + and -.

2) Regular model: Press the select button briefly.

AHU model: Press the select button for 3 sec to enter the menu and select *zero sensors*.




3) Wait until the LED turns off and then install tubes again for the pressure inlets.

STEP 5: INPUT SIGNAL CONFIGURATION

Input signals can be read over Modbus via DPT-MOD RS485 interface.

Signals	Accuracy for measurement	Resolution
0...10 V	< 0,5 %	0,1 %
NTC10k	< 0,5 %	0,1 %
Pt1000	< 0,5 %	0,1 %
Ni1000/(-LG)	< 0,5 %	0,1 %
BIN IN (potential free contact)		

The jumpers should be set according to the instructions below and the value should be read from the right register. Both inputs can be configured independently.

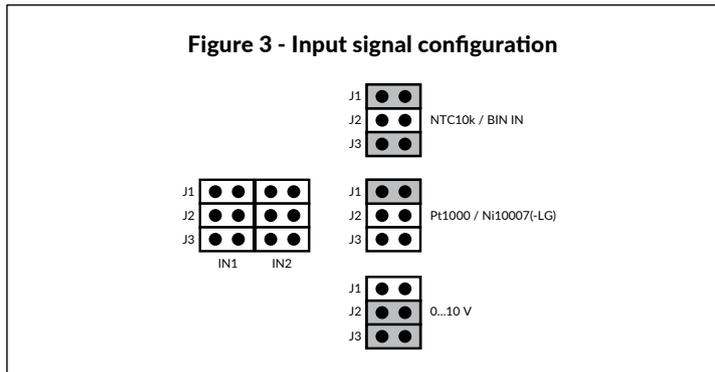

STEP 6: MODBUS REGISTERS

Function code 04 - Read input register

Register	Parameter description	Data Type	Value	Range
3x0001	Program version	16 bit	0...1000	0,00...99,00
3x0002	Pressure reading A	16 bit	-250...2500/7000	-250...2500/7000 (Pa)
3x0003	Pressure reading B	16 bit	-250...2500/7000	-250...2500/7000 (Pa)
3x0004	Input 1: 0...10 V	16 bit	0...1000	0...100 %
3x0005	Input 1: Pt1000	16 bit	-500...500	-50...+50 °C
3x0006	Input 1: Ni1000	16 bit	-500...500	-50...+50 °C
3x0007	Input 1: Ni1000-LG	16 bit	-500...500	-50...+50 °C
3x0008	Input 1: NTC10k	16 bit	-500...500	-50...+50 °C
3x0009	Input 2: 0...10 V	16 bit	0...1000	0...100 %
3x0010	Input 2: Pt1000	16 bit	-500...500	-50...+50 °C
3x0011	Input 2: Ni1000	16 bit	-500...500	-50...+50 °C
3x0012	Input 2: Ni1000-LG	16 bit	-500...500	-50...+50 °C
3x0013	Input 2: NTC10k	16 bit	-500...500	-50...+50 °C
AHU model only:				
3x0014	Flow m3/s	16 bit	0...10000	0...100 m3/s
3x0015	Flow m3/h	16 bit	0...30000	0...30000 m3/h
3x0016	Flow cfm	16 bit	0...30000	0...30000 cfm
3x0017	Flow l/s	16 bit	0...3000	0...3000 l/s
3x0018	Velocity m/s	16 bit	0...1000	0... 100 m/s
3x0019	Velocity f/min	16 bit	0...5000	0...5000 f/min

Function code 03 - Read input holding register - AHU model only

Register	Parameter description	Data Type	Value	Range
4x0001	Manufacturer	16 bit	0...7	0...7
4x0002	Formula unit (Manufacturer=7)	16 bit	0...5	0=m3/s, 1=f/min, 2=m/s, 3=l/s, 4=cfm, 5=m3/h
4x0003	K-Factor Integer	16 bit	0...9999	0...9999
4x0004	K-Factor Decimal	16 bit	0...999	0...999
4x0005	Response Time	16 bit	0...20	0...20 s

MODBUS REGISTERS CONTINUED

Function code 02 - Read input status

Register	Parameter description	Data Type	Value	Range
1x0001	Input 1: BIN IN	Bit 0	0..1	On - Off
1x0002	Input 2: BIN IN	Bit 0	0..1	On - Off

Function 05 - Write single coil

Register	Parameter description	Data Type	Value	Range
0x0001	Zeroing function	Bit 0	0..1	On - Off

Function code 06 - Write single register - AHU model only

Register	Parameter description	Data Type	Value	Range
4x0001	Manufacturer	16 bit	0..7	0..7
4x0002	Formula unit (Manufacturer=7)	16 bit	0..5	0=m3/s, 1=f/min, 2=m/s, 3=l/s, 4=cfm, 5=m3/h
4x0003	K-Factor Integer	16 bit	0..9999	0..9999
4x0004	K-Factor Decimal	16 bit	0..999	0..999
4x0005	Response Time	16 bit	0..20	0..20 s

RECYCLING/DISPOSAL

The parts left over from installation should be recycled according to your local instructions. Decommissioned devices should be taken to a recycling site that specializes in electronic waste.



WARRANTY POLICY

The seller is obligated to provide a warranty of five years for the delivered goods regarding material and manufacturing. The warranty period is considered to start on the delivery date of the product. If a defect in raw materials or a production flaw is found, the seller is obligated, when the product is sent to the seller without delay or before expiration of the warranty, to amend the mistake at his/her discretion either by repairing the defective product or by delivering free of charge to the buyer a new flawless product and sending it to the buyer. Delivery costs for the repair under warranty will be paid by the buyer and the return costs by the seller. The warranty does not comprise damages caused by accident, lightning, flood or other natural phenomenon, normal wear and tear, improper or careless handling, abnormal use, overloading, improper storage, incorrect care or reconstruction, or changes and installation work not done by the seller or his/her authorized representative. The selection of materials for devices prone to corrosion is the buyer's responsibility, unless otherwise is legally agreed upon. Should the manufacturer alter the structure of the device, the seller is not obligated to make comparable changes to devices already purchased. Appealing for warranty requires that the buyer has correctly fulfilled his/her duties arisen from the delivery and stated in the contract. The seller will give a new warranty for goods that have been replaced or repaired within the warranty, however only to the expiration of the original product's warranty time. The warranty includes the repair of a defective part or device, or if needed, a new part or device, but not installation or exchange costs. Under no circumstance is the seller liable for damages compensation for indirect damage.