» NOVOS 3 CO2

Room sensor CO2 with optional temperature and humidity



Datasheet

Subject to technical alteration Issue date: 13.09.2019 • A102





With design cover (left), standard design w/o design cover (right)

»APPLICATION

Room sensor for recording CO2 content and additionally temperature and humidity (relative, absolute, enthalpy, dew point). The maintenance-free sensor creates the conditions for a pleasant indoor climate and well-being. Typical applications are schools, office buildings, hotels, cinemas or similar. The devices VV and3xV are available with additional LED display (TLF - traffic light function) with color change function for displaying the measured values. The threshold values can be individually configured via the Thermokon NOVOSapp.

» TYPES AVAILABLE

Room sensor CO2 - active V 0..10 V | A 4..20 mA

NOVOS 3 CO2 V (cannot configured via NOVOSapp, Measuring range 0..2000 ppm, TLF not available) NOVOS 3 CO2 A (cannot configured via NOVOSapp, Measuring range 0..2000 ppm, TLF not available)

Room sensor CO2 + temperature - active 2x V 0..10 V | 2x A 4..20 mA

NOVOS 3 CO2 Temp VV MultiRange NOVOS 3 CO2 Temp AA MultiRange

Optional: TLF - traffic light function, RGB-LED indicating air quality

Room sensor CO2 + temperature + humidty - active 3xV 0..10 V | 3xA 4..20 mA

NOVOS 3 CO2 Temp_rH 3xV MultiRange NOVOS 3 CO2 Temp_rH 3xA MultiRange

Optional: TLF - traffic light function, RGB-LED indicating air quality

»NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

» SECURITY ADVICE – CAUTION



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

» REMARKS TO ROOM SENSORS

Location and Accuracy of Room Sensors

The room sensor should be mounted in a suitable location for measuring accurate room temperature. The accuracy of the temperature measurement also depends directly on the temperature dynamics of the wall. It is important, that the back plate is completely flush to the wall so that the circulation of air occurs through the vents in the cover. Otherwise, deviations in temperature measurement will occur due to uncontrolled air circulation. Also the temperature sensor should not be covered by furniture or similar devices. Mounting next to doors (due to draught) or windows (due to colder outside wall) should be avoided. The temperature dynamics of the wall will influence the temperature measurement. Various wall types (brick, concrete, dividing and hollow brickwork) all have different behaviours with regards to thermal variations.

Surface and Flush Mounting

The temperature dynamics of the wall influence the measurement result of the sensor. Various wall types (brick, concrete, dividing and hollow brickwork) have different behaviours with regard to thermal variations. A solid concrete wall responds to thermal fluctuations within a room in a much slower way than a light-weight structure wall. Room temperature sensors installed in flush boxes have a longer response time to thermal variations. In extreme cases they detect the radiant heat of the wall even if the air temperature in the room is lower for example. The quicker the dynamics of the wall (temperature acceptance of the wall) or the longer the selected inquiry interval of the temperature sensor is the smaller the deviations limited in time are.

»BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage $(\pm 0, 2 \text{ V})$ this is normally done by adding or reducing a constant offset value. As Thermokon transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0..10 V / 4..20 mA have a standard setting at an operating voltage of 24 V =. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of the NOVOSapp software and an optional Bluetooth interface. (additionally with sensors with BUS interface via an appropriate software variable).

Remark: Occurring draft leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

» APPLICATION NOTICE FOR HUMIDITY SENSORS

Refrain from touching the sensitive humidity sensor/element. Touching the sensitive surface will void warranty.

For standard environmental conditions re-calibration is recommended once a year to maintain the specified accuracy.

When exposed to high ambient temperature and/or high levels of humidity or presence of aggressive gases (i.e. chlorine, ozone, ammonia) the sensor element may be affected and re-calibration may be required sooner than specified. Re-calibration and deterioration of the humidity sensor due to environmental conditions are not subject of the general warranty.

» INFORMATION ABOUT SELF-CALIBRATION FEATURE CO2

Virtually all gas sensors are subject to some sort of drift. The degree of drift is partially dependent on the use of quality components and good design. But even with good components and excellent design, a small amount of drift can still occur in the sensor that may ultimately result in the need for a sensor to be recalibrated. The natural drift of the sensor is caused by:

• Dust/dirt • Aggressive chemicals absorbed inside chamber / optical elements • Corrosion inside chamber (high rh, condensation) • Temperature cycles causing mechanical stress • Electron/hole migration in the photo detector's semiconductor • Drift of photo amplifiers • External mechanical stress on chamber • Light source wear-off

Most of the effects listed above will be compensated by the automatic self-calibration of the sensor's dual channel technology. In contrast to commonly used ABC-Logic self-calibrating sensors with dual channel technology are suitable for all applications including those operating 24

Thermokon Sensortechnik GmbH, Platanenweg 1, 35756 Mittenaar, Deutschland · tel: 02778/6960-0 · fax: -400 · <u>www.thermokon.de</u> · <u>email@thermokon.de</u> NOVOS_3_CO2_(Temp)_(rH)_Datasheet_en.docx © 2019

»INFORMATION ABOUT INDOOR AIR QUALITY CO2

EN 13779 defines several classes for indoor air quality:

Category	CO ₂ content above the content in outdoor air in ppm		Description
	Typical range	Standard value	
IDA1	<400 ppm	350 ppm	Good indoor air quality
IDA2	400 600 ppm	500 ppm	Standard indoor air quality
IDA3	6001.000 ppm	800 ppm	Moderate indoor air quality
IDA4	>1.000 ppm	1.200 ppm	Poor indoor air quality

» TECHNICAL DATA

Measuring values	CO2 + temperature (opti	onal) + humidity (optional)		
Output voltage (type-dependent)	V VV 3xV 1x/2x/3x 010 V or 05 V, min load 10 kΩ (live-zero configuration 110/210 V) configurable via Thermokon NOVOSapp			
Output Amp (type-dependent)	A AA 3xA 1x/2x/3x 420 mA, max. load 500 Ω			
Power supply (type-dependent)	V VV 3xV 1535 V = or 1929 V ~ SELV		A AA 3xA 1535 V = SELV	
Power consumption (type-dependent)	n V VV 3xV typ. 0,4 W (24 V =) 0,8 VA (24 V ~)		A AA 3xA max. 0,5 W / 24 V =	
Output signal range temp. (scaling analogue output)	0+50 °C (default setting), selectable from 4 temperature ranges -50+50 0+50 -15+35 -20+80 °C, configurable via NOVOSapp			
Measuring range humidity (type-dependent)	relative humidty (default) 0100% rH	Enthalpy 085 KJ/kg	absolute humidity 050 080 g/m³,	dew point 0+50 -20+80 °C,
configurable via Thermokon NOVOSapp or BUS				
Measuring range CO2	02000 ppm 05000 ppm (optional configurable via Thermokon NOVOSapp or BUS) NOVOS 3 CO2 V (A) cannot configured via NOVOSapp, Measuring range 02000 ppm			
Accuracy temperature (type-dependent)	±0,5K (typ. at 21 °C)			
Accuracy humidity (type-dependent)	±2% between 1090% rH (typ. at 21 °C)			
Accuracy CO2	±50 ppm + 3 % of reading (typ. at 21 °C, 50% rH, 1015 hPa)			
Calibration	CO2 self-calibration, Dual Channel			
Sensor	NDIR (non-dispersiv, infrarot)			
Display	RGB-LED indicating air quality (CO2, traffic light function 'TLF'), optional			
Enclosure	PC V0, pure white, design cover (optional)			
Protection	IP20 according to DIN EN 60529			
Cable entry	rear entry, breaking points, drill mark top			
Connection electrical	tool-free mountable spring terminal, max. AWG16			
Ambient condition	050 °C, max. 85% non-condensing			
Mounting	surface mounted on flush-mounting box (Ø=2.36in. 60 mm) or to be mounted flat onto the surface using screws, base part can be mounted and wired separately			

» PRODUCT TESTING AND CERTIFICATION

Declaration of conformity

The declaration of conformity of the products can be found on our website https://www.thermokon.de/.


»MOUNTING ADVICES

Please make sure that the device is de-energized if you want to install it!

The installation can be performed on the flat wall surface or on a flush-mounted box. A representative place should be selected. Sunshine and draft, e.g. in the installation tube should be avoided, so that the measurement result is not falsified. Seal the end of the installation tube.

- For wiring, the upper part of the device must be removed from the base plate. Base plate and upper part are detachably connected to each other by means of locking lugs.
- The mounting of the base plate on the flat wall surface is done with rawplugs and screws.
- Finally, the device is attached to the base plate and fixed with the screw.

Housing open / close

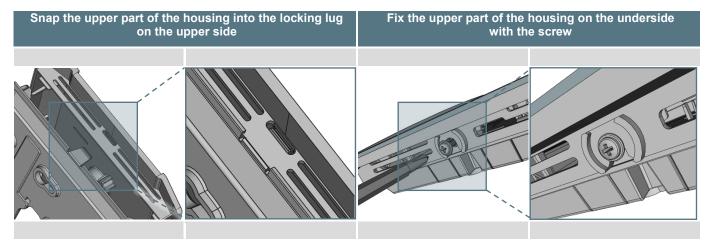

Cable entry

There are predetermined breaking points for 2 optional cable entries on the underside of the base plate On the upper side of the base plate there are 2 grits as position for a drill hole max. Ø 6 mm



When using a drill, you should absolutely ensure that the base plate is firmly clamped. Before drilling, the pressure must be reduced and carefully drilled. A sudden break-through of the drill bit can be the result.


» CONFIGURATION



The Thermokon bluetooth dongle with micro-USB is required for communication between NOVOSapp and NOVOS products (Item No.: 668262). Commercial bluetooth dongles are not compatible.

Application-specific reconfiguration of the devices can be performed using the Thermokon NOVOSapp. The configuration performed in voltage-supplied state.

The configuration-app and the app description can be found in the Google Play Store or in the Apple App Store.

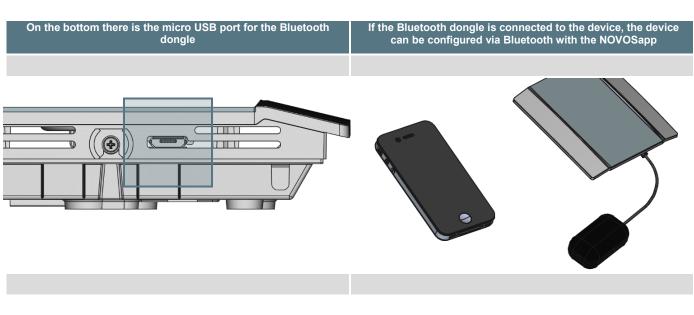

» CONNECTION PLAN

The following connection diagrams show the assignment of measuring values to analog outputs in factory default. Output variables reconfigurable via Thermokon NOVOSapp.

Room sensor CO2 – active V 0..10 V | A 4..20 mA

NOVOS 3 CO2 V	NOVOS 3 CO2 A
Image: Cost of the second	Image: AOI1 CO2 420 mA Image: GND 0 V⊥ Image: BH 1535 V =

Room sensor CO2 + temperature - active 2x V 0..10 V | 2x A 4..20 mA


NOVOS 3 CO2 Temp VV MultiRange	NOVOS 3 CO2 Temp AA MultiRange
Image: AOU2 Temperature 010 V Image: AOU1 CO2 010 V Image: AOU1 O V⊥ Image: AOU1 Image: AOU1 Image: AOU1 O V⊥ Image: AOU1 Image: AOU1 Image: AOU1 O V⊥ Image: AOU1 Image: AOU1 Image: AOU1 Image: AOU1 <td>Image: AOI2 Temperature 420 mA Image: AOI1 CO2 420 mA Image: AOI1 0 V⊥ Image: AOI1 0 V⊥ Image: AOI1 1535 V =</td>	Image: AOI2 Temperature 420 mA Image: AOI1 CO2 420 mA Image: AOI1 0 V⊥ Image: AOI1 0 V⊥ Image: AOI1 1535 V =

Room sensor CO2 + temperature + humidity - active 3xV 0..10 V | 3xA 4..20 mA

NOVOS 3 CO2 Temp_rH 3xV MultiRange	NOVOS 3 CO2 Temp_rH 3xA MultiRange	
Image: AOU3 Temperature 010 V Image: AOU2 Humidity 010 V Image: AOU3 CO2 010 V Image: AOU3 CO2 010 V Image: AOU3 O V⊥ Image: AOU3 Image: AOU3 Image: AOU3 O V⊥ Image: AOU3 Image: AOU3 Image: AOU3 O V⊥ Image: AOU3 Image: AOU3 Image: AOU3 Image: AOU3	Image: AOI3 Temperature 420 mA Image: AOI2 Humidity 420 mA Image: AOI3 CO2 010 V Image: AOI3 O V⊥ Image: AOI3 Image: AOI3 Image: AOI3 Image: AOI3 </td	

»TLF – TRAFFIC LIGHT FUNCTION (OPTIONAL)


The LED visualizes the air quality value (Thresholds optionally configurable via Thermocon NOVOSapp).





CO2 (factory default)	Behavior of the LED
0750 ppm	LED lights up in green
7511250 ppm	LED lights up in yellow
12512000 ppm	LED lights up in red

» DIMENSIONS (MM)



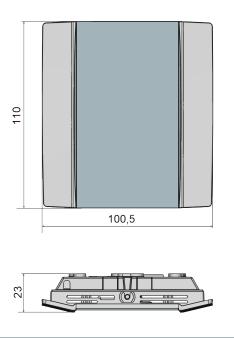



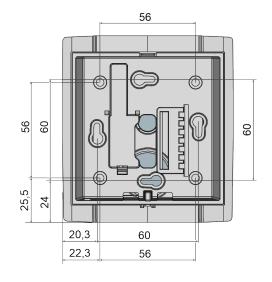

» ACCESSORIES (OPTIONAL)

Rawlplugs and screws (2 pcs. each) Frame for surface mounting NOVOS 3 Bluetooth dongle PSU-UP24 – flush mount power supply 24 V (AC Input: 100..240 V ~ | DC Output 24 V = 0,5 A) Item No. 102209 Item No. 634472 Item No. 668262 Item No. 645737